


2.4G Multimedia Keyboard

To provide complete input and control for Smart TV, TV Box, tablets, computers and other mobile devices

USER MANUAL

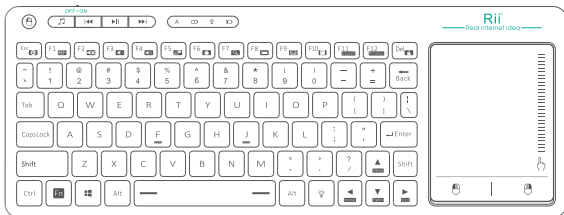

New product With

MULTI TOUCH

Model: K18+



Made in China

VER: 1.0

M/C: 06518207010

IN LINE WITH THE POLICY OF CONTINUED DEVELOPMENT THE MANUFACTURER RESERVES THE RIGHT TO AMEND THE SPECIFICATIONS WITHOUT PRIOR NOTIFICATION, THE PICTURES AND DATE IN THE STYLEBOOK ARE CONSULT ONLY, IF THERE IS FLUCTUATION, ACCORDING TO THE REAL OBJECT PLEASE.

Thanks for your purchase of our products. our company is dedicated to developing digital products and making customers' digital life more convenient, leading a digital era fashion and making the customers enjoy the latest and most convenient terminal experience. This 2.4G wireless keyboard touchpad combo is the first multimedia keyboard of Rii which supports PC Tablet Laptop Raspberry PI IOS Linux HTPC IPTV Google Smart TV Android Box XBMC Windows 2000 XP Vista 7 8 10 (Black) Besides of basic keyboard and mouse function for computers and other smart devices, this keyboard has a new breakthrough in supporting multimedia control keys. It also makes a breakthrough in indicators by adding Low power and CAPSLOCK indicators except traditional Rii keyboard's charging and RF wireless indicators. With built-in rechargeable Lithium battery and low power indicator, you will never need to worry about battery and power problem.

Features

2 in 1 2.4G Multi function multimedia 83 keys wireless keyboard with touchpad combo.

Specification

Product Size: 317.2 x123.6x18.3mm/12.4x4.8x0.7in

Weight: 340g

Temperature: -10°C to $+55^{\circ}\text{C}$

Battery: Built-in Rechargeable Lithium Battery

Battery Capacity: 400mAH

Operate Distance: MAX 10m

TX Power: less than $+5\text{dBm}$

Operational voltage: 3.7V

Operational current: 40mA

Charging voltage: 5V

Charging current: $< 300\text{mA}$

Sleep current: $< 50\mu\text{A}$

 
Packing contents



Multimedia keyboard



Wireless USB receiver
(placed in the
keyboard's back slot)



Extension cable



User manual

System requirement

HID compatible device

USB port

Windows 2000

Windows XP

Windows Vista ,Windows CE, Windows 7, Windows 8

Linux(Debian-3.1 ,Redhat-9.0 Ubuntu-8.10 Fedora-7.0 tested)

Android OS (With standard USB interface)

Smart TV(Not all) and android TV box


Amazon fire Stick

Specification

Left mouse button

1 2 3 4

- 1 Caps Lock
2. Charge
- 3.2.4Ghz RF Wireless Connection
4. Low Power

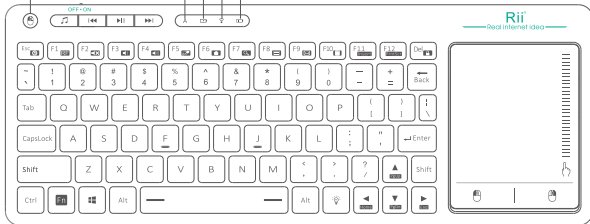

Multimedia Quick Start:

From ESC TO F10

Fn+ESC=Switch auto sleep model

Fn+F2=Mute

Fn+F3=Volume -

Fn+F4=Volume +

Fn+F5=Activate/Deactivate cursor

Fn+F6=Home


Fn+F7=Search

Fn+F8=Menu (PC)

Fn+F9=Email (PC)

Fn+F10=Calclater (PC)

Operation instruction

1. Take out the product.
2. Take out the USB receiver from the back flank of keyboard and plug it into your device's USB port such as android box, smart TV.
3. Turn on the device.
4. 2.4G RF indicator  will stay on after flashing. Now, you can use the keyboard.


Please note:

1. This keyboard can only be connected through Rii special USB Receiver.
2. if the 2.4G RF indicator does not stay on and keeping flashing, please try following steps to repair:
Step1: Keep your PC on, and be sure the keyboard is full of power.:)
Step2: Press the " F1 " without releasing.
Step3: Power on the keyboard and release the " F1 " immediately.
Step4: Plug the USB receiver on the USB port of your PC.
Wait a moment. The keyboard will repair automatically.
3. If it still can not work, please contact support@riitek.com for help.


Touchpad Function:

1. Single finger slides up and down on the right edge of the touchpad

Will work as scroll wheel up and down;

2. The bottom part of the touchpad has been divided into two parts, left area and right area. Clicking on the left area will work as a left mouse button, Clicking on the right area, can work as the right mouse button, Clicking on any other area of the touchpad can work as left mouse button;
3. All areas can be used to touch for moving the cursor;
4. Two fingers slide up and down for the mouse wheel function;
5. Two fingers click make as function of mouse right key;
6. Drag Selected Contents has following tow methods:
 - A. move the curosr to the dragging lable,just double click and drug.
 - B. Move the cursor to the dragging lable,press the  button in the left up, and move touchpad.

Backlight function operation

Press  to change the backlight color, press once to change to the Next color. There are total four selections, They are green, red, blue and Off in cycling;

Auto sleep/wake up function

This keyboard has two kinds auto sleep function. one is 3 minutes, the other is 2 hours. The keyboard will enter into sleep automatically if

having no key press and no touch in 3 minutes(model 1) or 2 hours (model 2).In sleep mode all leds are out. The machine can wake up by pressing any key. You can choose model by pressing FN+ESC. Default is 3 minutes. If you feel 3 minutes is too short, you can press FN+ESC to convert it into 2 hours model.

Turn off the device after use

After use, please turn off the device and remove the USB receiver from the USB port. You need to install the USB receiver into the USB receiver chamber.

Note: the supplied USB cable only can be used to charge the battery.

System Support Note:

1. It can work on Amazon Fire TV as follow: use an app called app2 fire on android. You can send any app to fire TV. Then run it so for example Google chrome. the keyboard works as mouse and keyboard. Just note that it only works on side loaded application's. For example Google chrome, Firefox, KODI is a native app on fire.
2. Not suitable for all smart TV. Some smart TV do not support external input device. Before you place the order, please use a wired keyboard to check if it can work.

FAQ

Problem:Unit does not respond

Possible issue: 1. Low batterypower.
2. Unit is not turned on.
3. Not plug the USB receiver into your device's USB port.

Solution:

1. charge the device for at least 15 minutes.
2. check if the switch selected to the ON position.
3. Please plug the USB receiver (placed in the keyboard back slot) to your device's USB port.

Problem: 1. Unit does not charge.
2. Unable to charge unit, won't work even when plugged in.
Low battery level light continuously blinks.
3. the item doesn't take a charge making it useless.

Possible issue:Defective battery

Solution:Contact support@riitek.com for a replacement.

Problem:the @ button isn't working

Possible issue:System language do not fit for keyboard

Solution:

This keyboard has different layout. Please know exactly which layout do

you want. For example. If you want and buy UK layout and you need to use @, please change your device's system language to British English. Then it can work by shift+@.

Problem: don't work all the time

Possible issue: 1. Pair failed.
2. Defective usb receiver.

Solution:

1. Repair

Step1: Keep your PC on, and be sure the keyboard is full of power.:)

Step2: Press the " F1 " without releasing.

Step3: Power on the keyboard and release the " F1 " immediately.

Step4: Plug the USB receiver on the USB port of your PC.

Wait a moment. The keyboard will repair automatically.

2. Contact support@riitek.com for a replacement USB receiver.

3. Contact support@riitek.com for refund or a replacement.

Problem: Touch pad on the keyboard is not responding.

Possible issue: 1. Lower battery.
2. Accidentally press F5 and turn off the touchpad function.
3. Defective item.

Solution:

1. Please charge the keyboard and have a try.
2. please press F5 to turn on the touchpad function.
3. Contact support@riitek.com for a replacement.

Problem: 1. press "a" but appear "aaaaaa..."

2. signal distance is only 1-2 m or less.

Possible issue: Signal interference. These are often happened when.
Using on smart TV or other large monitor device.

Solution:

Use the extension cable we shipped to you. Plug the cable on your smart TV and plug the USB receiver on the cable.

Problem: 1. mouse click is pressed in all the time.

2. mouse move without any press.
3. keyboard works or moves slowly.

Possible issue: Low battery

Solution: Please try to charge the keyboard.

Problem: Only touchpad can work.

Possible issue: The smart TV do not support external input device.

Solution:

Before you place the order, please use a wired keyboard to check if it can work. if you do not do that, please use it in other device or just return with well package and for a full refund.

Recycling



The disposal and recycling must be done as per local area or country regulation; we strive for continued research and development. Thus, we reserve the right to amend this user manual without prior notification.

After-sale service

Thanks again for your purchasing of our products. We are willing to offer you the most outstanding products and service and allow you to enjoy a pleasant high technology life. Since the date of purchase, if there is quality problem caused by production defectiveness, it has a 12-month repair warranty. For any doubt, please resort to sale service.

Contact Service: support@riitek.com.



www.riitek.com

THANKS FOR READING



FCC ID: 2AJU3RT518

Made In China